INSTALLATION INSTRUCTIONS

For Model 9909-1

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Thread the 2 mounting screws (E) into the mounting plate (B) spaced the same distance apart as the mounting holes in the fixture canopy (G). Note: The length of the mounting screws (E) into the mounting plate (B) may be adjusted if necessary.
4. Attach the mounting plate (B) to the outlet box (A) (not supplied) with mounting screws (C) (Size: #8-32*0.78"L).

CONNECTING THE WIRES (Fig. 2)

5. Connect the electrical wires as shown in Fig.2 making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided.

COMPLETING THE INSTALLATION (Fig. 1)

6. Align the canopy (G) to the mounting screws (E) and secure with cap nuts (F).
7. Install the bulbs (Type-B. not supplied). **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
8. Align glass shade (H) followed by cap (J) to canopy (G) and secure with hex nut (K) followed by finial (K).
9. Turn on the power at fuse or circuit box.

Your installation is now complete. Return power to the junction box and test the fixture.

Fig. 1

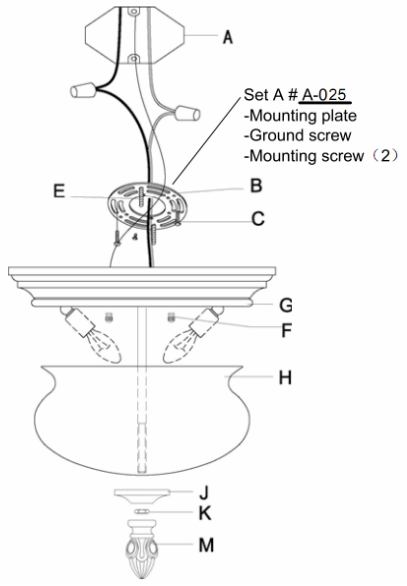

Fig. 2

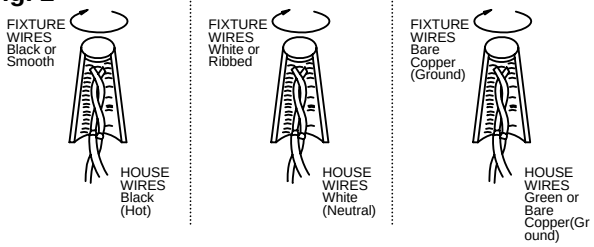
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green or Bare Copper(Ground)

Fig. 3